

SAVONIUS WIND TURBINE



ASSEMBLY INSTRUCTIONS



01 TOWER 1



02 FOUNDATION



1



03 TOWER 2







04 UPPER END PLATE



05 TURBINE BLADES

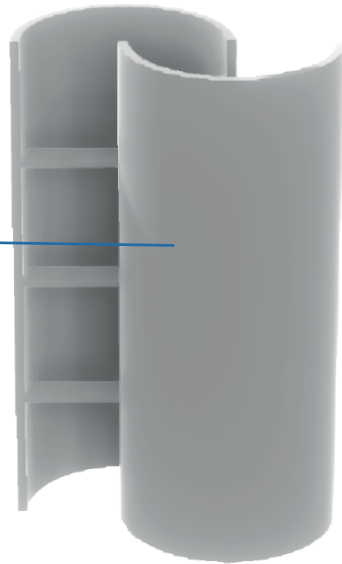

06 LOWER END PLATE

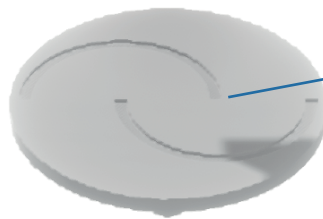



4



Part No.3 can also be printed in a variant for bearing insertion.

The part is adapted for the use of bearing with dimensions:

- 19mm (outer diameter)
- 10 mm (inner diameter)
- 5 mm (height)

03a PART WITHOUT BEARING



03b PART WITH BEARING

